# Honeywell





Multi-gas monitoring made easy – for oxygen, flammable, carbon monoxide and hydrogen sulfide





#### **Tough Durable Housing**

- Small and lightweight
- · Rugged, impact and weather resistant
- Includes crocodile clip or optional belt clip

#### Easy to Use

- · Works straight out of the box
- · Single button on/off operation
- Intuitive icons suitable for all languages
- · User configurable via menu
- Interactive product training guide available

#### **Ultra Clear Backlit Display**

- Unique 'flip display' at the press of a button
- Continuous reading of gas levels
- TWA/STEL and two instantaneous alarm levels with peak hold facility
- Battery life, calibration and self-test status

#### **Effective Gas Alarm Indication**

- Alarm and backlight combine to demand attention
- Distinctive loud audible alarm
- · Vibrating alarm supplied as standard

#### **Reliable Operation**

- Self-test on start up or on demand checks display, battery, sensor, audiovisual and vibrating alarms
- Uses patented SureCell<sup>™</sup> sensor technology and Reflex<sup>™</sup> cell check technique
- Includes TempraSURE™ thermal compensation and shock protection
- Periodic flash and/or beep for increased confidence (user configurable)

#### **Unsurpassed RFI Performance**

- Can be used alongside walkie-talkies or cell phones
- Exceeds the toughest industrial standards for RFI immunity

#### **Cost Effective**

- Fully inclusive 2 year warranty
- Minimum 2 year sensor life
- Initial and on-going running costs minimized

Minimax X4 is an easy-to-use portable gas detector for protection against flammable, oxygen, carbon monoxide and hydrogen sulfide gas hazards. It's ideal for use by those companies wanting advanced datalogging and product performance, reliability and ease of use without high costs of long term maintenance.



Minimax X4 focuses on ease of use by offering only the functionality required to comply with legislation. Everything that a user ROUTINELY HAS TO DO can be achieved with a single button press! Keeping it simple reduces training requirements and enables use in a wider range of industries.

Ease of use doesn't mean basic functionality. For example, every instrument has the capability to log data using a simple to fit memory card (the type you get in a digital camera). Events, gas data and the calibration history are all stored and the free software downloaded from our web site enables you to graph or print reports at the press of a button.

Convenience and the way users want to work is an important consideration. When clipped to the belt or harness users may want the re-assurance of being able to view the display from different positions. But with many other units the display is upside down forcing the user to remove the unit to look at the display, perhaps creating a hazard. With the Minimax X4 users can 'flip' the display at the press of a button for that added convenience and safety.

With an ultra clear backlit display, vibrating and powerful audiovisual alarms, the Minimax X4 demands attention when gas hazards are detected in even the most adverse working conditions. All in all, Minimax X4 offers reliable, easy to use gas detection to keep you safe.

# **General specification**




Standard Specification					
General	Reusable multi-gas detector for personal protection against flammable, toxic and oxygen gas hazards. Supplied complete with calibration certificate, quick start guide, alkaline batteries (2), tubing, flow adaptor, crocodile clip, and manual.				
Gases Detected	Range	Level 1	Alarm Se Level 2	t Points # STEL	TWA
Flammable (Exp)	0 to 100% LEL*	10% LEL	20% LEL	n/a	n/a
Oxygen (O <sub>2</sub> )	0 to 30% vol	23.5% vol	19.5% vol	n/a	n/a
Carbon Monoxide (CO)	0 to 999 ppm	35 ppm	100 ppm	100 ppm	35 ppm
Hydrogen Sulfide (H <sub>2</sub> S)	0 to 250 ppm	10 ppm	15 ppm	15 ppm	10 ppm
	* Flammable channel can display gas concentration in %vol units for a range of flammable gases.  * User configurable.				
Sensors	Patented Surecell <sup>TM</sup> electrochemical and catalytic bead sensing technology for stable and reliable performance in all industrial environments.				
Diagnostics	Self-test of circuitry, battery, LCD, and sensors on start up or on demand.  Patented Reflex™ cell check techniques included as standard for toxic channels.				
Display	Ultra clear icon driven backlit LCD displays gas level and detector status. Unique 'flip display' function at the press of a button for added user convenience. High/Low Peak hold facility included with user clear. Time and date.				
User Interface	Intuitive three button operation for detector configuration.				
Audible Alarm	90 db @ 30 cm				
Visual Alarm	High intensity red LEDs combined with red backlight for maximum effect.				
Vibrating Alarm	Supplied as standard.				
Operating Temperature	-20°C to +50°C (-4°F to +122°F). TempraSURE™ temperature compensation.				
Humidity	5-95% RH (non-condensing).				
IP Rating	Ingress protection to IP65.				
Approvals	North America: Class I, Div 1, Groups A, B, C, D T4.Europe: ATEX II 2G EEx ia d IIC T4. (specific version only) Canada: certified to CSA C 22.2-152 and CSA C22.2-157. North America: Alkaline Batteries: UL, Class I, Div 1, Groups A, B, C, D, T4. NiMH Batteries: UL, Class I, Div I, Groups A, B, C, D, T2. Europe: Alkaline Batteries: ATEX II 2G EEx ia d IIC T4. NiMH Batteries: ATEX II 2G EEx ia d IIC T2				
RFI/EMC	CE EN50270:1999 and EN55011.				
Sensor Life	Minimum of 2 years backed by inclusive 2 year warranty.				
Battery Life	14-16 hours with 2 x AA Alkaline batteries. 12 hours of operation per charge, minimum, with rechargeable NiMH batteries. Low power audiovisual warning.				
Dimensions	4.9"(H) x 3"(W) x 1.4"(D)				
Weight	7.2 oz. (without batteries), 9 oz. (with batteries)				
Warranty	2 years				

### **Optional Accessories**

- Field case
- Belt clip
- Hand aspirator kit with inline filter
- Tubing (2 m/6')
- 1 m (3') sample probe
- 10 m (30') sample tubing with ball float
- Calibration gas (Balanced Air, CH<sub>4</sub> 50% LEL,CO 50 ppm, H<sub>2</sub>S 25 ppm)
- 0.3 L/min flow regulator
- Spare memory card for data logging (Refer to the manual for acceptable models and part numbers)

- Desktop USB memory card reader
- Data log graphing and reporting software
- Interactive training guide CD
- · Data logging kit
- Confined space kit
- Calibration kit
- Bump Test gas cylinder

# **Display Details**

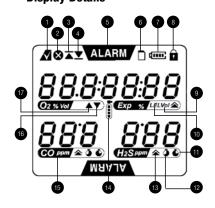

- 1 Test Pass Icon
- 2 Test Fail Icon
- 3 High Peak Icon
- 4 Low Peak Icon (for O<sub>2</sub> only)
- 5 Alarm Icon
- 6 Data Logging Icon
- 7 Battery Icon
- 8 Pass Code Protection Icon
- 9 %Vol Unit Icon
- (10) %LEL Unit Icon
- 11 STEL Icon
- 12 TWA Icon
- 13 Alarm Level 1 Icon Alarm Level 2 Icon (for flammable and toxic)
- (14) Calibration Icon
- (15) Gas Label Icon
- (16) O<sub>2</sub> Deficiency Alarm Icon
- 0, Excess Alarm Icon

# **Honeywell Analytics Lines of Business**







#### Commercial

Vulcain-brand gas detection from standalone units to fully engineered, multipoint systems, all offering cost-effective regulatory compliance

» Applications: parking structures, chillers, mechanical rooms, office towers, commercial buildings, shopping centers, swimming pools, golf courses, schools and universities, laboratories

#### Industrial

Renowned Sieger and Manning gas detection systems with advanced electrochemical, infrared and open path sensing technologies

» Applications: oil and gas, cold storage, water/wastewater treatment, chemicals, engine rooms, plastics and fibers, agriculture, printing and light industrial

# **Portables**

Single or multi-gas Lumidor and other premium detectors with compact, lightweight designs ranging from simple alarm only units to advanced, fully configurable and serviceable instruments

» Applications: underground utility and electricity ducts, boiler rooms, post-fire sites, sewers, industrial plants, industrial hygiene, first responder teams, remote fleets





#### Find out more

www.honeywellanalytics.com

#### **Contact Honeywell Analytics:**

### **Americas**

Honeywell Analytics Inc. 405 Barclay Blvd. Lincolnshire, IL 60069 USA

Tel: +1 847 955 8200 Toll free: +1 800 538 0363 Fax: +1 847 955 8210 detectgas@honeywell.com

#### **Technical Services**

ha.us.service@honeywell.com

www.honeywell.com

# **High Tech/Government**

A complete portfolio of gas and chemical detection instrumentation including infrared spectroscopy (MST) with no cross interference, to Chemcassette paper-based solutions (MDA Scientific) offering detection down to parts per billion

» Applications: semiconductor manufacturing and nanotechnology, aerospace propulsion and safety, specialty chemicals industry, research laboratories, emergency response

# **Technical Services**

24/7 global network includes post-sales service and Systems Integration teams

- » Emergency call out, service contracts, on/off-site repair, training and commissioning
- » Complete range of spares, consumables and accessories

## Europe, Middle East, Africa

Life Safety Distribution AG Wilstrasse 11-U31 CH-8610 Uster Switzerland

Tel: +41 (0)44 943 4300 Fax: +41 (0)44 943 4398 gasdetection@honeywell.com

#### **Asia Pacific**

Honeywell Analytics Asia Pacific #508, Kolon Science Valley (I) 187-10 Guro-Dong, Guro-Gu Seoul, 152-050

Korea

Tel: +82 (0)2 2025 0307 Fax: +82 (0)2 2025 0329 analytics.ap@honeywell.com

#### Please Note

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.

